


THIS DIAGRAM IS FOR INFORMATION PURPOSE ONLY.
ALL RESPONSIBILITY IS THAT OF THE INSTALLER.
ANY WORK SHOULD BE CARRIED OUT BY A QUALIFIED
INSTALLER ONLY.



WIRING INSTRUCTIONS FOR CONNECTING TEK425 OR TEK485 WALL CONTROL TO TEK461/467 COOLER CONTROL BOX

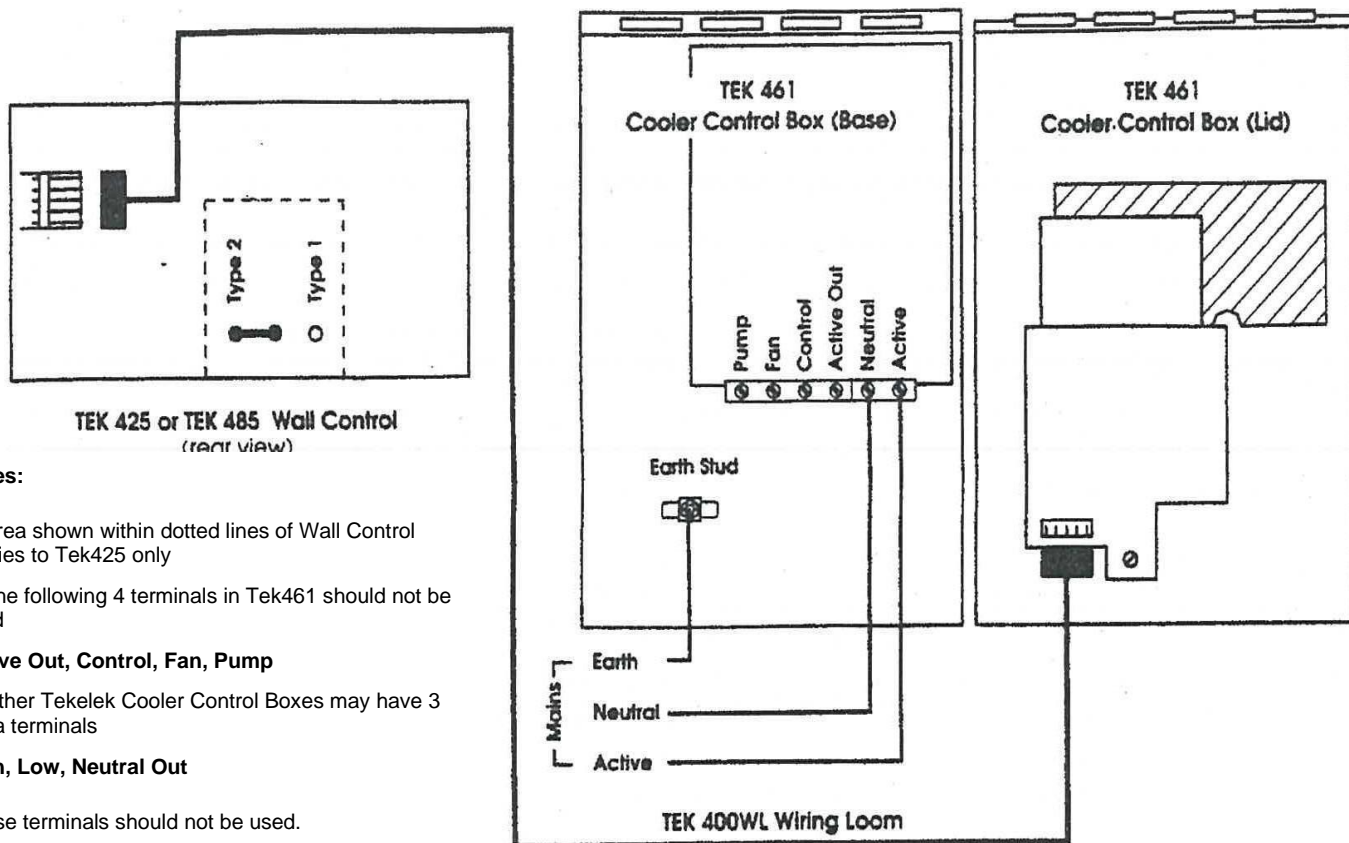

Notes:

1. Area shown within dotted lines of Wall Control applies to Tek425 only

2. The following 4 terminals in Tek461 should not be used

Active Out, Control, Fan, Pump

3. Other Tekelek Cooler Control Boxes may have 3 extra terminals

High, Low, Neutral Out

These terminals should not be used.

WIRING INSTRUCTIONS

PREPARATION

1. Isolation switch on side of Cooler Control Box must be set to **off**.
2. **Mains** power taken to Cooler Control Box and connected to terminals marked **Mains In**.
3. Wall control Type 1/Type 2 jumper connection to be left in the Type 2 position unless otherwise advised in Cooler Manufacturer's Instructions (Tek425 only)

WIRING

Connect Wall to Cooler Control Box with Wiring Loom Provided:

- Loom may be connected either way around: connectors at each end are identical.
- Loom connectors are polarized to ensure correct orientation when making connection.

FAN SPEED

1. Turn on isolation switch on side of Cooler Control Box.
2. Minimum Fan Speed is set in Cooler Control Box; refer to Cooler Manufacturer's instructions for details.